

NEW

AV2 Spacer

For laying solid wood, and laminate flooring without any wedges



Simply better.

Simply insert between the wall and the first row of flooring, use the **NEW BESSEY® Floor Spacer** for a fast and simple set up. Adjustable to compensate for wall irregularities and removal is a quick turn of the dial to release pressure.

Your benefits at a glance:

1 Clever dial

Set up is fast and simple. Inserted between the wall and the first row of flooring, the distance to the wall can be set simply by turning the red dial. When the installation work is finished, the spacer is easy to remove; just rotate the dial to release the pressure.

2 Wide contact and support surface

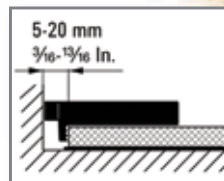
Simply put, the pressure points on the wall and the flooring are avoided. There is no danger of the aid slipping or tilting – as can happen with wedges or blocks – when working with the new BESSEY spacer.

3 Exact millimetre scale

Wall surface irregularities of 5 to 20 mm can be compensated for easily. The exact distance required for spacing can be readily seen on the millimetre scale.

4 "Robust" in the size of a business card

Manufactured from impact and break resistant, glass fibre reinforced polyamide, the spacer is light and tough and will last for years. It is just about the size of a business card.

**NEW**

Spacer AV2

BESSEY® Product #	Opening Range	Jaw Width	Approx. Weight	Case
	mm	mm	Pounds	qty.
AV2	5-20	89	0.44	4

- Quickly adjustable for wall gap distances of 5 to 20 mm
- Spacer for floating laminate, parquet and hardwood flooring installations
- Wide contact and support area for avoiding pressure points on the floorboards and plaster
- Very light and compact

AV2 Spacer Video



E-Newsletter Sign up



Rev. June 12-2012

