
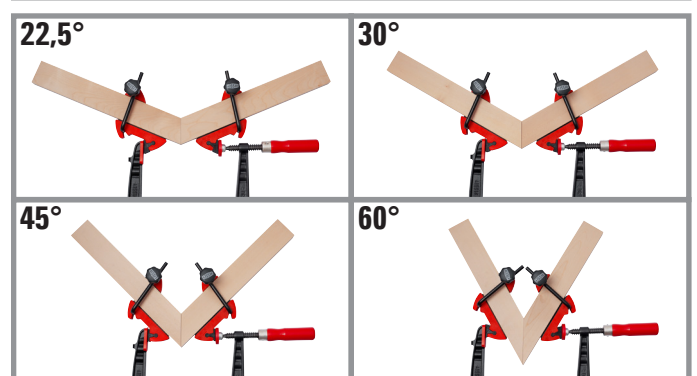
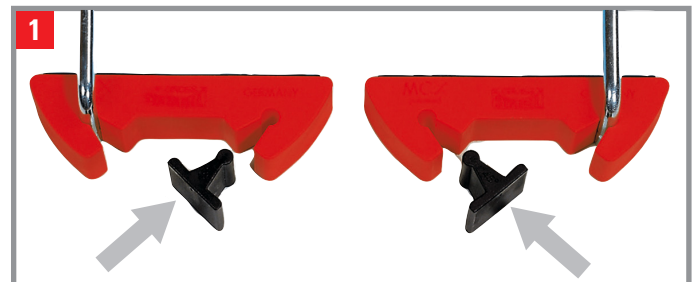


Mitre clamping system MCX

Instructions for use


Practical accessory for BESSEY screw clamps TG, GZ, GMZ, EHZ, EZS, DUO and EZL / EZXL

- 1 Insert adapter 22.5° (A), 30° (B₁), 60° (B₂) or 45° (C) into basic unit.

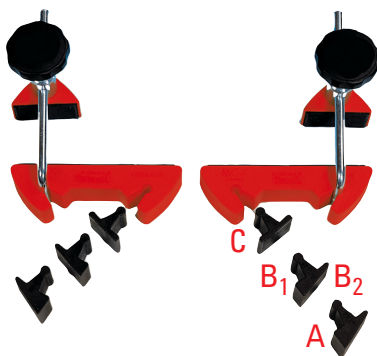

- 2 Press the clamping jaws onto the workpiece using the stepless adjustment device and tighten them using the set screws.

IMPORTANT: Adapters must be symmetrical to each other.

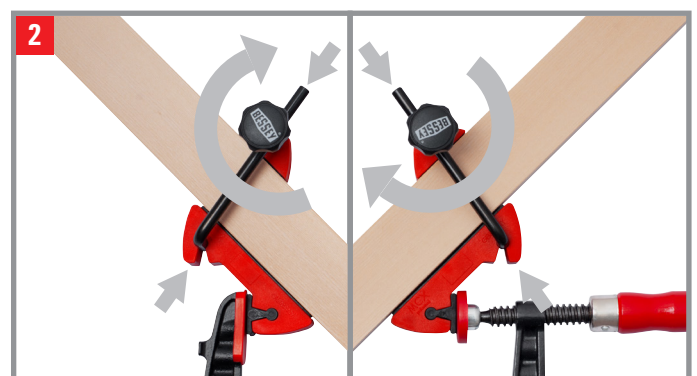

- 3 By rotating the handle of the clamp, the clamping jaws move in the direction of the arrow until the desired clamping pressure is reached.

NOTE: recommended clamping width of the screw clamp 300 mm.

